



# Tabinet 10 Slimline- USB Charge 7780

## Wall Mounting

1. Open the charging compartment by unscrewing the three M4 bolts indicated and pulling the charge compartment cover off.

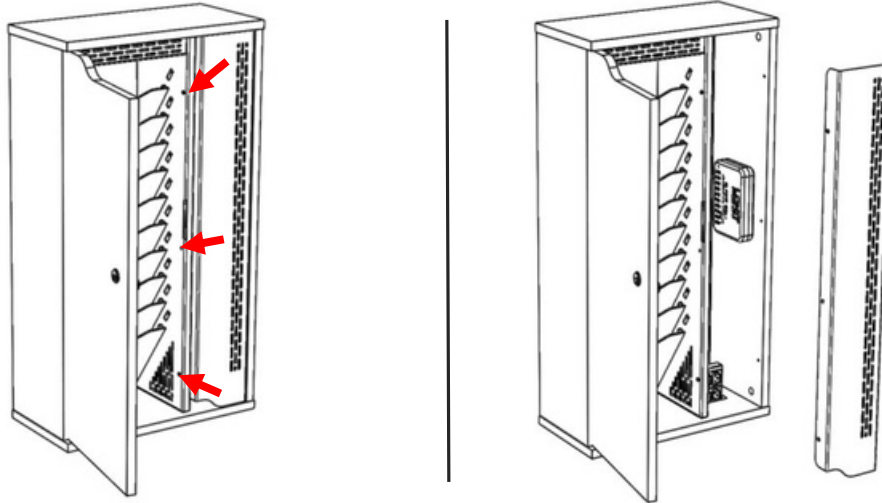

2. To access the lower mounting holes its necessary to remove the lowest shelf, to do this, gently flex the divider and remove it from the cabinet.

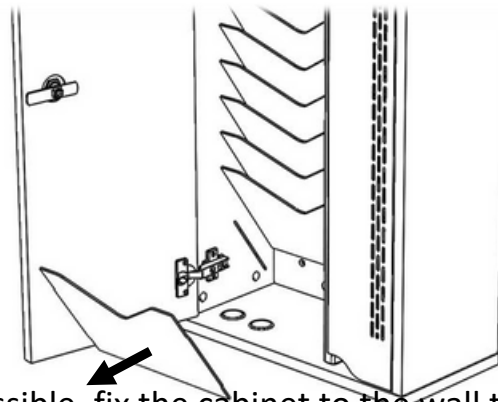


4. The fixing lower holes should now be accessible, fix the cabinet to the wall through the holes using fixings appropriate for your wall. See the tech spec for the hole pattern.


3. Once the cabinet is securely fixed to the wall pop the lowest divider back into place.

## Cabling

5. Inside the charging compartment insert a USB lead into the Loxit 10 port charger.

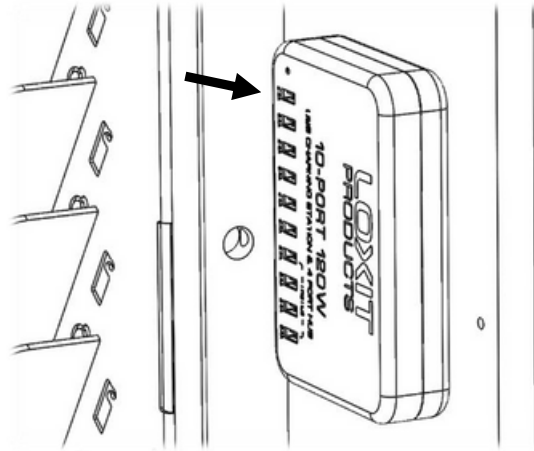

6. Pass the cable through the cut out as shown and pull it out to the correct length. Then secure the cable in place with a cable tie through the headphone shaped cut out.

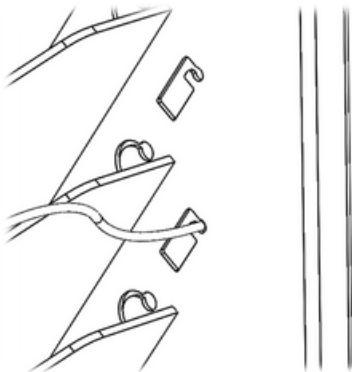

7. Once the cables are all in place replace the charge cover and secure in place with the 3 bolts which were removed in step 1.

